

 
Winsonic LCD Monitor OSD Operation

Control Functions

The Monitor control functions are located on the lower side of the panel.

The control key description

1. MENU : Activate the on-screen-display function
2. Down : Mute On /Off or Brightness down control
3. UP : Brightness up control
4. Auto : Signal Source
5. ⏻ : Power On/ Off

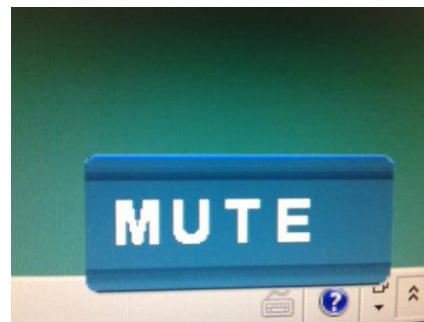

Description

1. Menu

Press the Menu key to activate the on screen display screen. It is a toggle key. Press twice to turn off the OSD. After 15 sec. idle time, the OSD screen will automatically turn off.

2. UP & Down : Select key

The two keys have two sets of functions:

- When OSD screen is not activated, the two keys are used to adjust the Backlight.
- When OSD screen is activated (When "Menu" key is pressed), the two keys are used to select the wanted adjustment items

3. Auto

Press Auto Key to selection signal source .

4. ⏻ : Power switch

Use the power switch to turn ON or OFF power. We recommend turning your system power on first, then the LCD monitor.

 
ADJUSTING THE MONITOR

The LCD monitor is designed to work with a range of compatible video adapters on the market. Due to the possible deviations between these video adapters, you may make some adjustment to fit the monitor for adapter used.

ADJUSTMENT PROCEDURE

First, you must activate the OSD screen through pressing the MENU key, the screen will show in the center of screen as below:


OSD SCREEN on PC /DVI/ HDMI

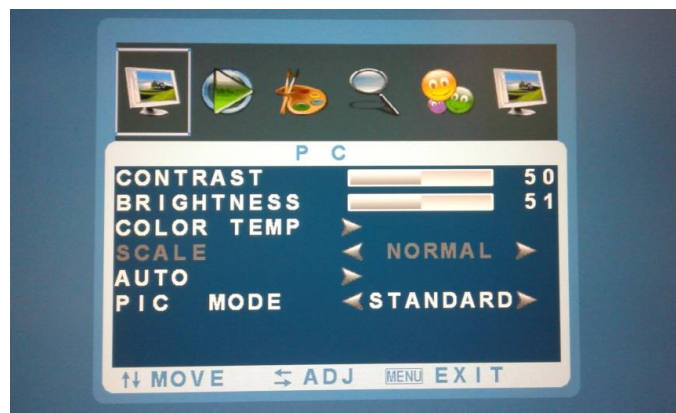

PICTURE SETTING

Picture Mode / Contrast / Brightness / Color Temp / Auto / PIC Mode

 - Press Menu Key back to the tool bar.
- Use Auto key to select the required adjustment item.
- Use Up or Down key to confirm required item.
- Use Up or Down key to adjust the desired function or press Menu Key end..

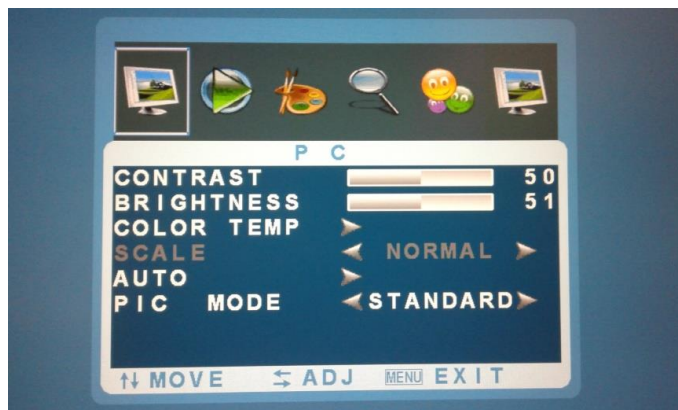


On AV / HDMI by DVD player.



SOUND SETTING

Equalizer/ Volume / Sound Mode / AVC / Surround

 - Press Menu Key back to the tool bar.
- Use Auto key to select the required adjustment item.
- Use Up or Down key to confirm required item.
- Use Up or Down key to adjust the desired function or press Menu Key end..

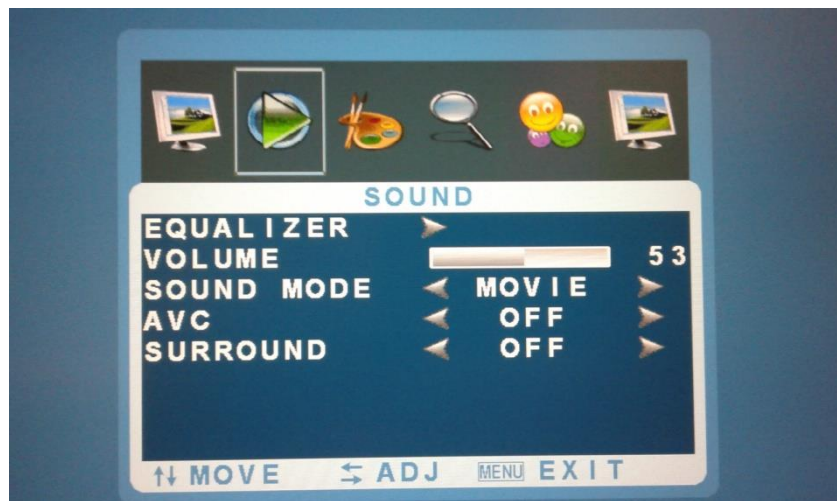

OSD SYSTEM

Language / OSD H.Position / OSD V.Position / TIMER/HALFT/SLEEP-TIMER / Recall

- Press Menu Key back to the tool bar.
- Use Auto key to select the required adjustment item.
- Use Up or Down key to confirm required item.
- Use Up or Down key to adjust the desired function or press Menu Key end..



OSD ADVANCE

H START / H SIZE / V START/ V SIZE

- Press Menu Key back to the tool bar.
- Use Auto key to select the required adjustment item.
- Use Up or Down key to confirm required item.
- Use Up or Down key to adjust the desired function or press Menu Key end..



OSD PIP

MULTI WIN OFF / PIP / POP

- Press Menu Key back to the tool bar.
- Use Auto key to select the required adjustment item.
- Use Up or Down key to confirm required item.
- Use Up or Down key to adjust the desired function or press Menu Key end..

